


**PRODUCT SPECIFICATIONS**

Model	88930-00
Size	16.5 X 171mm
Weight	60g
Charging voltage	5V
Maximum power	12W
Charging method	USB TYPE-C
Rated voltage	3.7V
Battery capacity	1100mAh
Charging time	2-3 hours
Usage time	On/Off cycle time: about 1 hour Continuous work: about 25 minutes Features pass-through technology, allowing it to be used while charging

**PRO THREAD BURNER OPERATOR'S MANUAL**

ITEM NUMBER: 88930-00

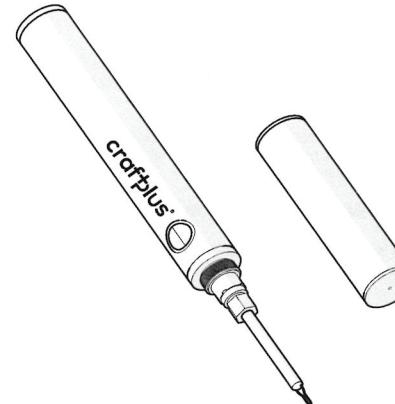

Copyright © 2025 Ivan Leathercraft Co., LTD. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Ivan Leathercraft Co., LTD. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

Your Pro Thread Burner has been engineered and manufactured to high standards for dependability, ease of operation, and operator safety. Properly cared for, it will give you years of trouble-free performance. This manual contains operating and information. Be sure to follow the precautions described and this manual for future reference.

**INSTRUCTIONS FOR USE****SETUP**

Remove the pen cap and attach the heating head. This device is designed for cutting and finishing threads with heat. It is compatible with most waxed, stranded, and woven threads. Frayed webbing can also be fixed with this tool. Please test on scrap material before using on your project.

**TURNING ON/OFF**

1. To turn on the machine, press the button five times quickly. The white indicator light will flash three times to signal that it is in standby mode.

2. To turn off the machine, repeat the same action (press the button five times quickly). The white indicator light will flash three times again to confirm the shut down.

**OPERATING IN STANDBY MODE**

When in standby, press and hold the button briefly to activate the device. It will operate at 100% heating output.

The indicator light will show battery status:

- Above 70%: White light
- 30% - 70%: Blue light
- Below 30%: Red light

**CONTINUOUS WORKING MODE**

In standby mode, press the button three times quickly to activate continuous mode at 70% power output. The indicator light will display a gradient cycle, and after 5 minutes, the device will automatically return to standby mode.

**AUTOMATIC SHUT DOWN**

If the device remains inactive for 30 minutes while in standby mode, it will automatically shut down.

**CHARGING INSTRUCTIONS**

Use a 5V adapter to charge the device through the USB TYPE-C charging port. The charging indicator will be red during charging and turn green when fully charged. Ensure proper ventilation during charging by not covering the device.

**LONG-TERM STORAGE**

If not in use for an extended period, fully charge the device before storing it. Recharge the battery every six months.

**LOW BATTERY INDICATION**

When the battery is low, press the power button five times. The white light will flash three times, followed by eight red flashes. If you continue pressing the button, the red light will flash ten times continuously. Charge your device as soon as possible.

**PRECAUTIONS****UNBOXING**

Carefully remove the product from the packaging, check that all accessories are included, and inspect the product and packaging for any damage.

**DAMAGE REPORTING**

If you notice any damage upon receipt, contact the seller immediately to resolve the issue.

**CLEANING ACCESSORIES**

Ensure that all accessories are kept clean after use.

**TEMPERATURE CONTROL**

Do not expose the machine to temperatures exceeding 45 °C or 113 °F.

**BURN RISK**

Avoid touching any part of your body with the heating head during use to prevent burns.

**SUPERVISION FOR MINORS**

For safety, parents should supervise children under 16 while using this product.

**BATTERY CARE**

This product contains a built-in lithium battery. Keep the main unit dry and do not wash it with water.

**FIRST-TIME USE**

It is normal for the heating head to emit smoke during the first use; this is not a cause for concern.

**STORAGE**

If not used for a long time, remove the heating head and store it separately.

**TROUBLESHOOTING****STICKY RESIDUE ON IRONING HEAD**

Solution: Hold down the heating button and gently clean with a metal brush or tweezers.

**INDICATOR LIGHT ON, NO HEATING**

Solution: Detach and reattach the ironing head, ensuring it is tightened. If needed, replace it with a new head.

**NO RESPONSE FROM OPERATION BUTTON**

Solution: Check that the device is charged and powered on.

**FLASHING RED INDICATOR LIGHT**

Solution: Check if the battery is drained and ensure you are using the original heating head.

**WARRANTY TERMS****WARRANTY DURATION**

1 year for circuit components / 3 months for mechanical parts.

**EXCLUSIONS FROM WARRANTY**

- Natural wear and tear.
- Damage from improper use or handling.
- Damage from improper transportation after sale.
- Modifications or dismantling by unauthorized repairers.
- Damage from natural disasters (e.g., lightning, floods).
- Severe impact damage.

IF YOU HAVE FURTHER QUESTIONS, PLEASE CONTACT CUSTOMER SUPPORT AT [INFO@IVAN.TW](mailto:INFO@IVAN.TW).